


HOW TO MEASURE THE CYLINDER BODY

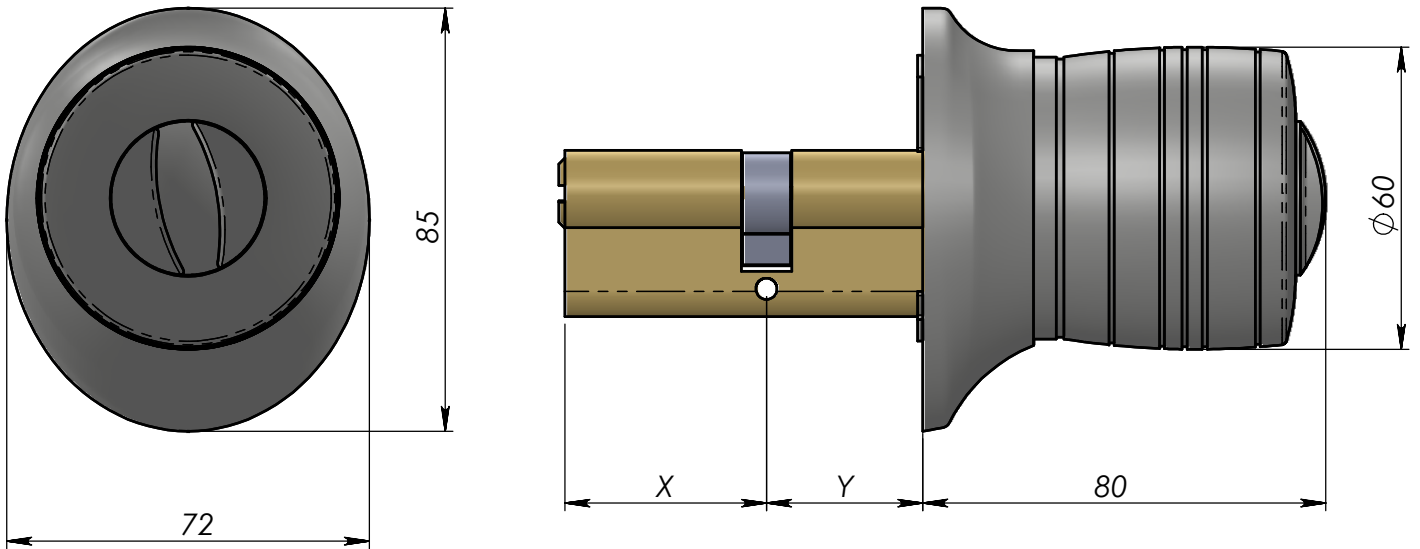

REF.	X	Y
0802007RF	31	37-43
0802008RF	35	35-41
0802009RF	40	35-41

X= DISTANCE TO CENTRE OF FIXING SCREW HOLE

Y= DISTANCE TO CENTRE OF FIXING SCREW HOLE , Y DISTANCE IS 6 mm ADJUSTABLE USING THE SPACES PROVIDED